


CVT10

Fiber Converter

V1.1.2

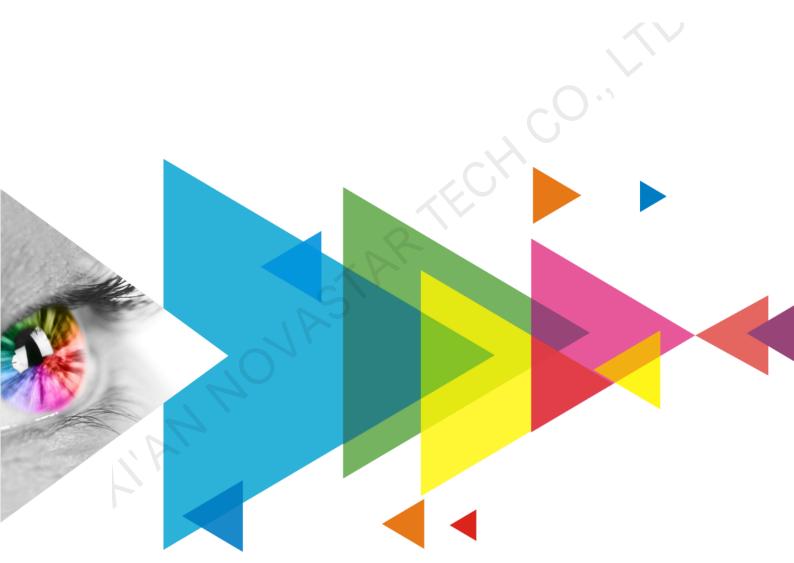

Specifications

Change History

Document Version	Release Date	Description
V1.1.2	2021-01-08	Added the assembling effect diagram.
V1.1.1	2021-01-06	Updated the packing information.
V1.1.0	2020-12-31	 Added the description of model segments. Updated the rear panel appearance diagram. Updated the dimensions diagram. Updated the application diagrams. Updated the humidity range. Deleted the assembling description.
V1.0.0	2020-12-04	First release

Introduction

The CVT10 fiber converter offers a cost-effective way to convert optical signals to electrical signals, or electrical signals to optical signals, for connecting the sending card to the LED display. Delivering a full-duplex, efficient and stable data transmission that is not easily interfered with, this converter is ideal for long-distance transmission.

The CVT10 hardware design focuses on the practicality and convenience of the on-site installation. It can be mounted horizontally, in a suspended way, or rack mounted, which is easy, secure and reliable. For rack mounting, two CVT10 devices, or one CVT10 device and a connecting piece can be combined into one assembly that is 1U in width.

Features

- Models include the CVT10-S (single-mode) and the CVT10-M (multi-mode).
- 2x optical ports with hot-swappable optical modules installed at the factory, bandwidth of each up to 10 Gbit/s
- 10x Gigabit Ethernet ports, bandwidth of each up to 1 Gbit/s
 - Fiber in and Ethernet out: 8x Ethernet ports available (ports 1–8), ports 9–10 currently unavailable (to be available in the future upgrade)
 - Ethernet in and fiber out: 10x Ethernet ports available
- 2 types of power connectors, including a 3-pin power socket and a PowerCON socket
- 1x type-B USB control port

Appearance

Front Panel



Name	Description
USB	Type-B USB control port Connect to the control computer (NovaLCT V5.4.0 or later) for upgrading the CVT10 program,
DIME	not for cascading.
PWR	Power indicator Always on: The power supply is normal.
STAT	Running indicator
	Flashing: The device is functioning normally.
OPT1/OPT2	Optical port indicators
	Always on: The optical fiber connection is normal.
1–10	Ethernet port indicators
	Always on: The Ethernet cable connection is normal.
MODE	The button to switch the device working mode
	The default mode is CVT mode. Only this mode is currently supported.
CVT/DIS	Working mode indicators
	Always on: The corresponding mode is selected.
	CVT: The fiber converter mode. OPT1 is the master port and OPT2 is the backup port.
	DIS: Reserved

Rear Panel




Name	Description		
100-240V~, 50/60Hz, 0.7A	Power input connector		
	I: Enable the PowerCON socket.		
	O: Turn off the power.		
	II: Enable the 3-pin power socket.		
OPT1/OPT2	10G optical ports		
	CVT10-S optical module description:	CVT10-S optical fiber selection:	
	Hot swappable	Model: OS1/OS2	
	• Transmission rate: 9.95 Gbit/s to 11.3 Gbit/s	Transmission mode: Single-mode twin-core	
	Wavelength: 1310 nm	Cable diameter: 9/125 μm	
	Transmission distance: 10 km	Connector type: LC	
		Insertion loss: ≤ 0.3 dB	
		Return loss: ≥ 45 dB	

www.novastar.tech PAGE 2

Name	Description		
	CVT10-M optical module description:	CVT10-M optical fiber selection:	
	Hot swappable	Model: OM3/OM4	
	Transmission rate: 9.95 Gbit/s to 11.3 Gbit/s	Transmission mode: Multi-mode twin-core	
	Wavelength: 850 nm	Cable diameter: 50/125 μm	
	Transmission distance: 300 m	Connector type: LC	
		Insertion loss: ≤ 0.2 dB	
		Return loss: ≥ 45 dB	
1–10	Gigabit Ethernet ports		
	Green indicator always on: The Ethernet cable connection is normal.		
	Yellow indicator flashing: There is data transmission.		

Dimensions

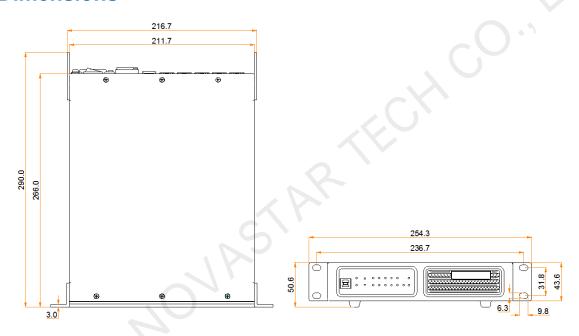


Tolerance: ±0.3 Unit: mm

Applications


The CVT10 is used for long-distance data transmission. Users can decide a connection method based on whether the sending card has optical ports.

The Sending Card Has Optical Ports



www.novastar.tech PAGE 3


The Sending Card Has No Optical Ports



Assembling Effect Diagram


A single CVT10 device is half-1U in width. Two CVT10 devices, or one CVT10 device and a connecting piece can be combined into one assembly that is 1U in width.

Assembly of Two CVT10



Assembly of a CVT10 and a Connecting Piece

The connecting piece can be assembled to the right or left side of the CVT10.

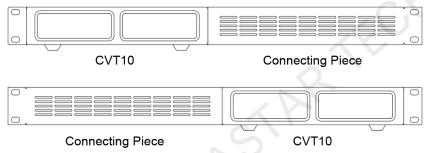

Specifications

Electrical Specifications	Power supply	100-240V~, 50/60Hz, 0.7A
	Rated power consumption	22 W
Operating Environment	Temperature	-20°C to +60°C
	Humidity	10% RH to 80% RH, non-condensing
Storage Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	254.3 mm × 50.1 mm × 290.0 mm
	Net weight	2.1 kg Note: It is the weight of a single product only.
	Gross weight	3.1 kg Note: It is the total weight of the product, accessories, printed materials and packing materials packed according to the packing specifications.

Packing Information	Packing box	362.0 mm × 141.0 mm × 331.0 mm, kraft paper box
	Outer box	387.0 mm × 173.0 mm × 359.0 mm, kraft paper box
	Packing list	• 1x CVT10
		1x Power cord, 1x USB cable, 1x Ethernet cable
		1x Supporting bracket A (with nuts), 1x Supporting bracket B (without nuts)
		1x Connecting piece
		• 12x M3*8 screws
		1x Assembling diagram
		1x Certificate of Approval
Certifications	RoHS, FCC, CE, IC	

The amount of power consumption may vary depending on factors such as product settings, usage, and environment.

www.novastar.tech PAGE

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Copyright © 2021 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech
Technical support
support@novastar.tech